



Larson Electronics LLC WWW.MAGNALIGHT.COM

9419 E US HWY 75, Kemp, TX 75143 - P: 903-498-3363 F: 903-498-3364 E: sales@magnalight.com

HML-6M-IRF

- 1) Place the light assembly face down on a flat, clean surface.
- 2) Remove the 2 rear Phillips screws installed in the rear Housing.
- 3) Place the 2 screws removed in step 2 through the adaptor bracket assembly holes that match the 2 rear housing holes on the light. The shaft of the screw runs parallel with the hook shaped part of the bracket
- 4) Slide the rubber sealing sleeves over the screws, pushing the rubber seal all the way up against the back of the bracket.
- 5) Place the support bracket over the rear of the light and slide the screws back into the original holes in the rear housing. Tighten them until the bracket is seated against the rear housing.
CAUTION: DO NOT over tighten the rear screws; this may cause damage to the main housing.
- 6) With the rear support bracket installed, place the light face up and lay the filter over the light.
- 7) Place the 3 1/2" x 1/4"-20 T-screws through the ears of the filter head with the "T" end of the bolt hooked in the support bracket
- 8) Install the nylon thumb nuts over the bolts and tighten down until the filter head seats against the main housing, pulling the seal down snug. The filter will stop when it seats against the face lip of the lens of the light.

PLEASE NOTE: This filter will become HOT during use and should not be touched with bare hands during operations.